


ACTECH

PROTECTIVE COATINGS

ACTECH BATHROOM WATERPROOFING SYSTEM

Actech's comprehensive bathroom waterproofing system is designed to ensure maximum protection against water damage, ensuring your bathroom remains durable and secure. Our system incorporates a range of specialized products that work together seamlessly to create a robust, long-lasting waterproof barrier.

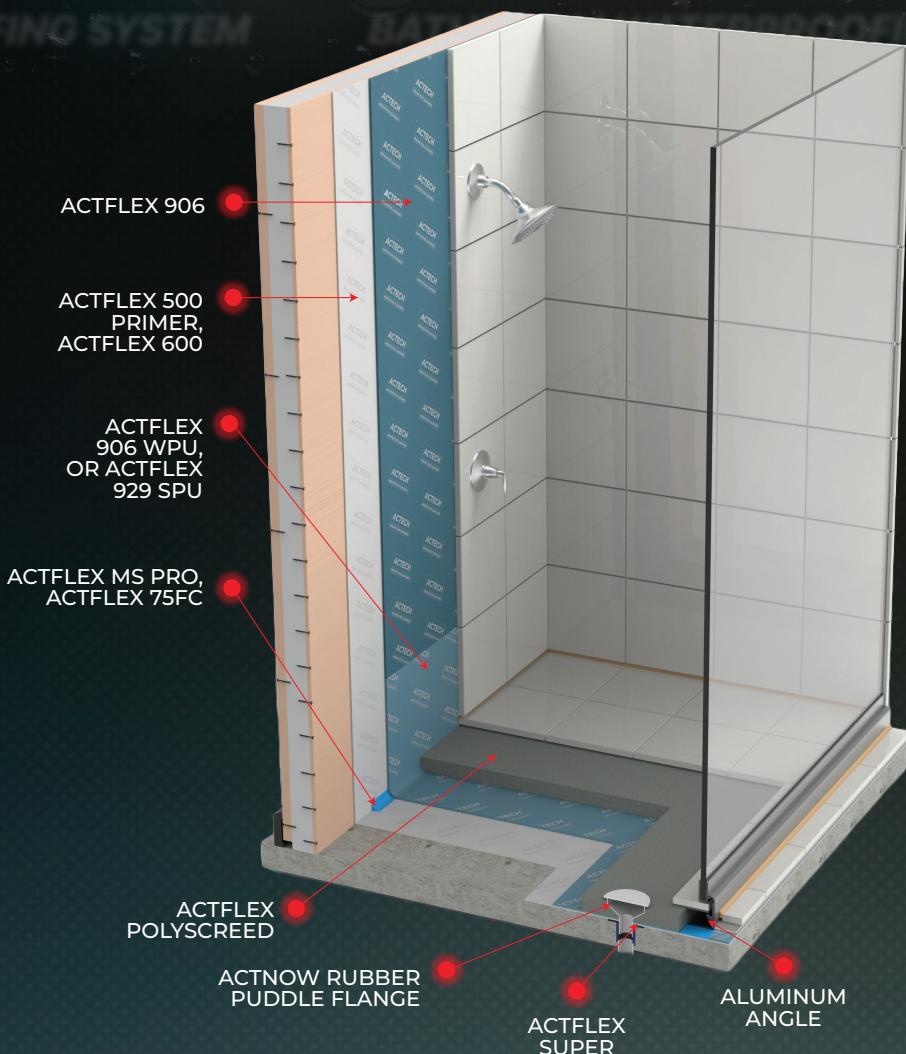

Why Choose Actech Bathroom Waterproofing System?



Superior Protection

Ensures complete waterproofing with a multi-layered approach.



Durability

Long-lasting products designed to withstand the rigors of bathroom environments.



Quick Application


Fast drying and re-coat times ensure a swift and efficient application process.



Versatile Solutions

Suitable for various surfaces and bathroom configurations.

Trust Actech for a reliable, efficient, and effective bathroom waterproofing solution. Our products are engineered to protect your space, giving you peace of mind and a dry, secure bathroom for years to come.

 (02) 8021 3517

 admin@actechpc.com.au

 www.actech.com.au

HOW TO WATERPROOF A BATHROOM



01 Surface Preparation

Ensure the surface is clean, dry, and free of any debris or contaminants.

02 Primer Application

ACTFLEX 600 PRIMER

- **Coverage:** 3-4 sqm per liter.
- Apply a uniform coat.
- Allow 1 hour for drying.

03 Sealing Joints and Cracks

ACTFLEX 75FC: FLOORS

- **Tack-free time:** 40-60 minutes.

ACTFLEX MS PRO: WALLS

- **Tack-free time:** 40-60 minutes.
- These products provide quick-setting, durable seals for joints and cracks.



04 Flanges

- Install **ACTNOW RUBBER** 100mm **PUDDLE FLANGE** to 100mm Drainage Outlet (Concrete only)

05 Waterproof Membrane

ACTFLEX 906 WPU: WALLS

- **Coverage:** 1.33 sqm per liter per coat.
- Apply a minimum of 2 coats.
- Allow 24 hours between coats for re-coat time.

ACTFLEX 929 SPU: FLOORS

- **Coverage:** 1.6 sqm per liter per coat.
- Apply a minimum of 2 coats.
- Allow 6 hours between coats for re-coat time.

06 Surface Smoothing

ACTFLEX POLYSCREED

- Mix 3 liters of ACTFLEX POLYSCREED with 20kg of sand and cement.
- Apply the mixture to the surface.
- Allow 24 hours for drying.

